

EK Type Support Unit

Angle Type for Fixture

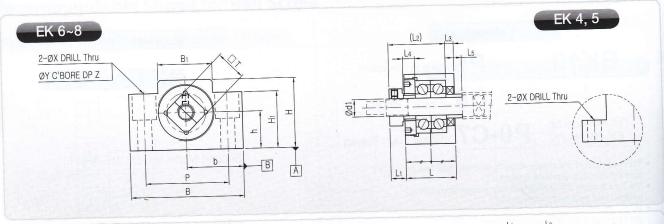


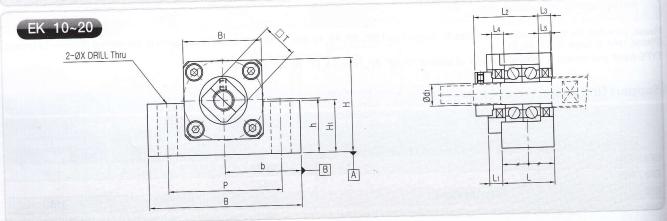



Note

- 1. Installation can be conducted based on the surface of A and B. Please, use the spacer of accurate size when adjustment of height or length is necessary.
- 2. It is not allowed to dissemble the support unit as the preload of the bearing has been already controlled.
- 3. Precise amount of grease is filled in the support unit.
- 4. EK-4~EK-5 general type is used radial ball bearing and in small axial load.
- 5. Please refer to page 55 about bearing type and characteristic according to Support Unit grade
- 6. Please refer to page 60 about attachment torque of the lock nut.

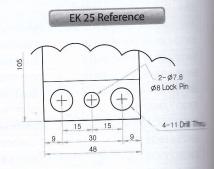

						88													Unit : mm
Model	đ _i	L	Lı	L ₂	Ls	В	H b±0		2 h±0.02	Bı	Hı	Р	Χ	Υ	Z	Collar Size		□Τ	Massic
								b±0,02								L ₄	L ₅		
No.	_	15	5,5	18,5	2	34	19	17	10	18	7	26	4.5	-	-	3,5	3.5	10	50
EK4	4						21	18	11	20	8	28	4.5	-	31-11	4.5	4.5	11	68
EK5	5	16.5	6,5	19.5	3,5	36						30	5,5	9,5	11	5	7	12	120
EK6	6	20	5,5	22	3.5	42	25	21	13	18	20	30							230
EK8	8	23	7	26	4	52	32	26	17	25	26	38	6.6	11	12	5,5	7,5	14	
ENO						70	43	35	25	36	24	52	9	-	-	5,5	5,5	16	430
EK10	10	24	6	29.5	6	70					0.4	ΕO	9	_	_	5,5	5,5	19	420
EK12	12	24	6	29.5	6	70	43	35	25	36	24	52	9						500
	15	25	6	36	5	80	50	40	30	41	25	60	11	-	-	10	10	22	530
EK15	10	25						47.5	30	56	25	75	11	-	-	11	11	30	1310
EK20	20	42	10	50	10	95	58	47.5					(Refer to Drawing)			14	14	35	1950
EK25	25	48	13	59	14	105	68	52,5	35	66	25	85	(Ref	er to Dra	awiiig)	14	17		