



for a greener tomorrow

**MITSUBISHI  
ELECTRIC**  
*Changes for the Better*

FACTORY AUTOMATION

# INVERTER FR-A800

IP55 Compatible FR-A806



- Direct installation near the machine
- Work hour reduction for inverter installation
- Wire and space saving

# GLOBAL IMPACT OF MITSUBISHI ELECTRIC



Through Mitsubishi Electric's vision, "Changes for the Better" are possible for a brighter future.

## ***Changes for the Better***

We bring together the best minds to create the best technologies. At Mitsubishi Electric, we understand that technology is the driving force of change in our lives. By bringing greater comfort to daily life, maximizing the efficiency of businesses and keeping things running across society, we integrate technology and innovation to bring changes for the better.

Mitsubishi Electric is involved in many areas including the following

### **Energy and Electric Systems**

A wide range of power and electrical products from generators to large-scale displays.

### **Electronic Devices**

A wide portfolio of cutting-edge semiconductor devices for systems and products.

### **Home Appliance**

Dependable consumer products like air conditioners and home entertainment systems.

### **Information and Communication Systems**

Commercial and consumer-centric equipment, products and systems.

### **Industrial Automation Systems**

Maximizing productivity and efficiency with cutting-edge automation technology.

<b>Features</b>	<b>4</b>
<b>Connection Example</b>	<b>8</b>
<b>Standard Specifications</b>	<b>9</b>
<b>Outline Dimension Drawings</b>	<b>12</b>
<b>Terminal Connection Diagrams, Terminal Specification Explanation</b>	<b>13</b>
<b>Peripheral Devices</b>	<b>20</b>
<b>Precautions for Use</b>	<b>22</b>
<b>Support</b>	<b>24</b>


# FR-A806 Inverter for Field Use

The FR-A806 inverter has a highly protective structure with the IP55 rating, which enables installation near machines.


## ■ Inverter for installation outside of the enclosure

### 1. Direct installation near the machine


Since the inverter is compatible with hostile environments such as high humidity and dusty environments, you can easily install the inverter near the machine or in available spaces. By installing the inverter outside of the enclosure, the enclosure design becomes easier in terms of countermeasures against heat, and the enclosure is downsized as well.

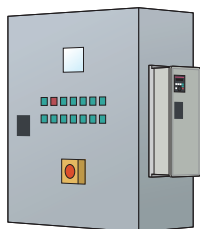


Installation on the side of the enclosure

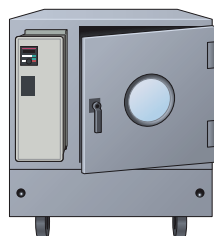

Installation on the surface of the equipment

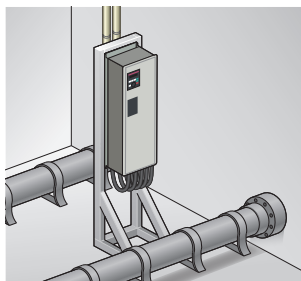


Stand-alone installation

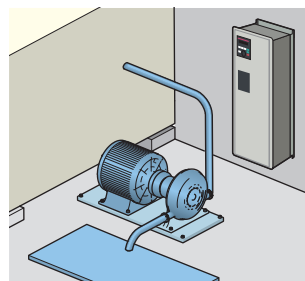

Wall installation

### 2. Work hour reduction for inverter installation


There is no need to install more enclosures to use more inverters. The inverter can be installed easily without using an enclosure. At the time of the drive system upgrade by changing from the commercial power drive to the inverter drive, the inverter can be installed outside of the enclosure.

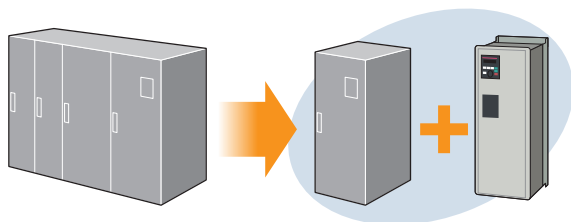

### 3. Wire and space saving

The inverter has a built-in DC reactor and EMC filter, requiring less wiring work for the peripheral devices.

The inverter with a built-in disconnecting switch\*1 is also available. The remote switch enables turning ON/OFF of the input power when the power panel is located away from the inverter. \*1: For the details, please contact your sales representative.

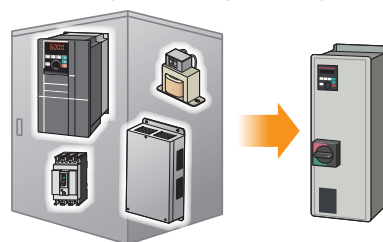

## IP55 rating

The IP code represents the specified protection ratings using a code. The first and the second digits following IP (International Protection) represent the protection ratings.

**IP 5 5**

#### • First digit (protection rating against solid objects)

Protection level	Description
<b>Class 5</b> *2	Protection against dust. No ingress of dust that may inhibit normal operation. IP5X refers to protection of the inverter functions and maintenance of safety when the inverter is put into a stirring device containing dust of 75 µm or smaller in diameter, stirred for 8 hours, and then removed from the device.


#### • Second digit (protection rating against water)

Protection level	Description
<b>Class 5</b>	Protection against water jets from any direction IPX5 refers to protection of the inverter functions against water jets from any direction when about 12.5-liter water*3 is injected from a nozzle with an inside diameter of 6.3 mm from the distance of about 3 m for at least 3 minutes.

\*2: The FR-A806 inverter is certified as compliant with IP55 category 1 (no ingress of dust under negative pressure inside).

\*3: Water here refers to fresh water at room temperature (5 to 35°C).



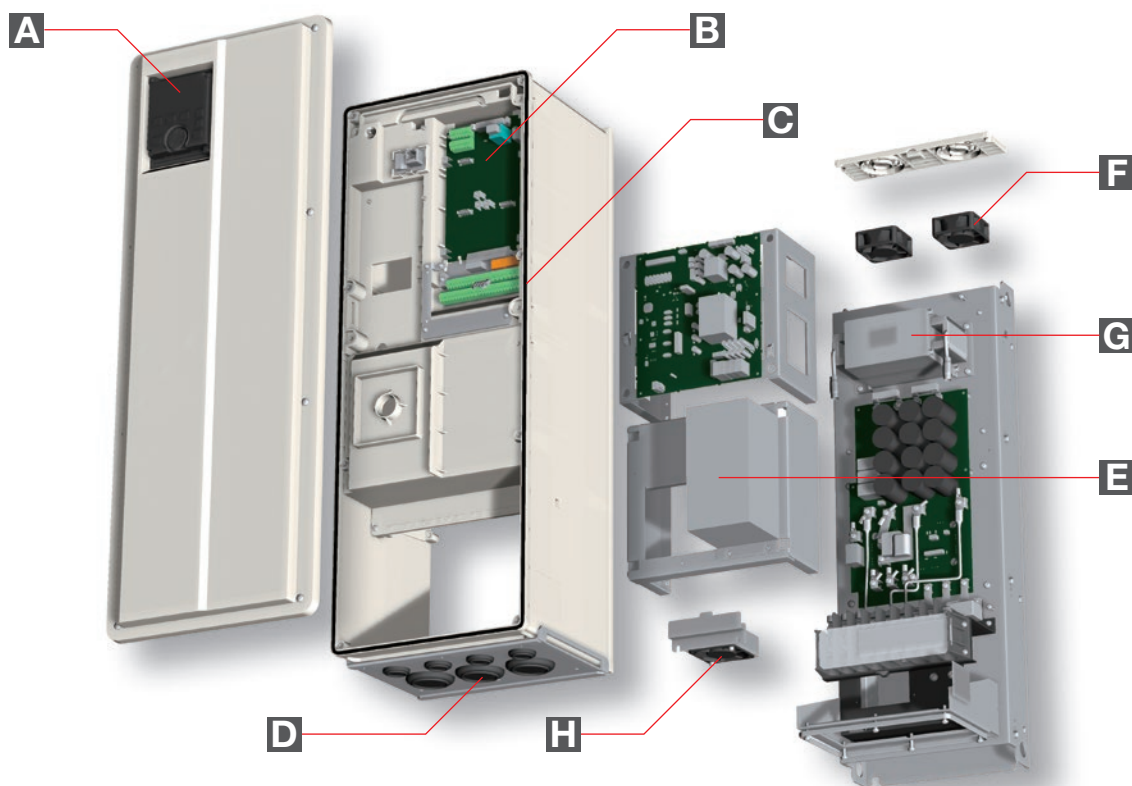

Refer to page 22 for the details of main differences between the standard FR-A840 inverter and the IP55 compatible FR-A846 inverter.

## **A** Operation panel (FR-DU08-01)

The FR-DU08-01 is compatible with the IP55 rating and detachable from the inverter. An optional LCD operation panel (FR-LU08-01) is available for replacement.

## **D** Cable connection

To ensure compliance with the IP55 rating of the cable section, cable glands are available.

## **G** DC reactor

The inverter has a built-in DC reactor compatible with the EN 61000-3-2/12 standard.

## **B** Circuit board coating

The coating conforms to IEC 60721-3-3 3C2/3S2 for improved environmental resistance.

## **E** EMC filter

The inverter has a built-in filter for industrial environments (EN 61800-3 C3). A filter for residential environments (EN 61800-3 C2) is also available.

## **H** Internal air circulation fan

The internal cooling fan (detachable) circulates air inside the inverter.

## **C** Gasket

Reliable gasket sealing is provided.

## **F** Waterproof fan

The cooling fan is compatible with the IP55 rating. It is detachable from the inverter without disconnecting the main circuit wiring. (The cooling fan is provided for the FR-A846-00250 or higher.)



# Application examples

The inverter is usable in many applications even where space is limited or in hostile environments.

## Waste transfer conveyor

### Point

The inverter can be installed directly below the conveyor. The inverter is usable even where waste may fall off the line or water may splash.

### PLC function

When the signals from the object sensors are directly input to the inverter, whole control can be performed by the inverter only according to the operation of the peripherals.




## Building water pumps

### Point

The inverter can be installed in a vacant space near the pump or in a narrow space. The inverter is usable even if water drops fall nearby.

### PID pre-charge function

This function is used to avoid rapid acceleration caused by starting the PID action while the pipe is empty, which prevents water hammer damage to pumps or other parts.

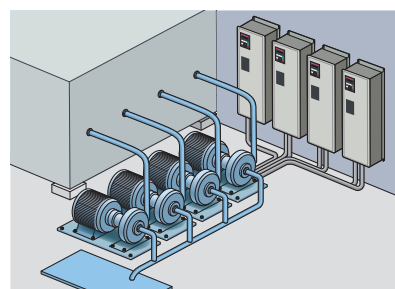

## Marine equipment

### Point

The FR-A846-C2 inverter is approved as compliant with ship classification standards, and usable in many applications on a ship. The inverter has a built-in EMC filter compliant with the ship classification standards.

Certification body	Certification body
NK (Nippon Kaiji Kyokai)	DNV GL (DNV GL AS)
ABS (American Bureau of Shipping)	CCS (China Classification Society)
BV (Bureau Veritas)	KR (Korean Register of Shipping)
LR (Lloyd's Register of Shipping)	



For details, refer to the Application Catalog for Ships (L/NA)06105(ENG).


## Shield machine

### Point

The inverter can be installed near the cooling pipe of the water-cooled motor, minimizing the cable length between the inverter and the motor. The inverter is usable in dusty environments.

### Real sensorless vector control

The motor control without using an encoder improves reliability in an unfavorable operating environment, such as where vibrations exist.

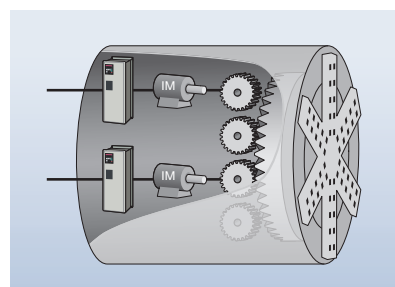

# Lineup

## Inverter

**FR - A 8 4 6 - 7.5K - 1 - 60 C3**

Symbol	Voltage class
4	400 V class

Symbol*1	Description
0.4K to 132K	Inverter ND rated capacity (kW)
00023 to 03610	Inverter rated current (SLD rated current of the A800 standard model) (A)

Symbol	Type*2	Communication type
1	FM	RS-485
2	CA	
E1	FM	Ethernet
E2	CA	

Symbol	Circuit board coating (IEC60721-3-3 3C2/3S2 compatible)	Plated conductor
60	With	Without
06	With	With

Symbol	Structure, functionality
6	IP55 compatible model



Symbol	EMC filter	Operation panel
C2	Built-in C2 filter Residential environments (EN 61800-3 C2)	FR-DU08-01
C3	Built-in C3 filter Industrial environments (EN 61800-3 C3)	
L2	Built-in C2 filter Residential environments (EN 61800-3 C2)	FR-LU08-01

Three-phase 400V class FR-A846-□ (with a built-in DC reactor)	0.4K	0.75K	1.5K	2.2K	3.7K	5.5K	7.5K	11K	15K	18.5K
	00023	00038	00052	00083	00126	00170	00250	00310	00380	00470
	•	•	•	•	•	•	•	•	•	•
	22K	30K	37K	45K	55K	75K	90K	110K	132K	
	00620	00770	00930	01160	01800	02160	02600	03250	03610	
	•	•	•	•	•	•	•	•	•	

\*1: IP55 compatible models have LD and ND rating types only. However, the SLD rated current of standard models is used to represent the model.

\*2: Specification differs by the type as follows.

Type	Monitor output	Initial setting			
		Built-in EMC filter	Control logic	Rated frequency	Pr.19 Base frequency voltage
<b>FM</b> (terminal FM equipped model)	Terminal FM (pulse train output) Terminal AM (analog voltage output (0 to ±10 VDC))	OFF	Sink logic	60 Hz	9999 (same as the power supply voltage)
<b>CA</b> (terminal CA equipped model)	Terminal CA (analog current output (0 to 20 mADC)) Terminal AM (analog voltage output (0 to ±10 VDC))	ON	Source logic	50 Hz	8888 (95% of the power supply voltage)

## Motor

### Premium efficiency dustproof/waterproof type motor SF-PRP

The motor is compliant with the dust test and water test specifications in JIS C 4034-5. The motor ensures reliability in environments exposed to plenty of water.



**S F - PR V P - KR**

Symbol	Structure
S	Superline series

Symbol	Outer sheath
F	Totally-enclosed fan-cooled

Symbol	Series
PR	Premium series (Steel plate frame)

Symbol	Installation
None	Foot mounting type
V	Vertical type
F	Flange type

Symbol	Classification
P	Dustproof/waterproof type (IP55)


Symbol	Country code
None	Japan and the U.S.A.
EU	Europe
VN	Vietnam
RU	Russia
KR	Korea
CN	China
MX	Mexico
UL	UL standard

Type		Totally-enclosed fan-cooled																							
Model		Dustproof/waterproof type																							
Number of poles		SF-PRP			SF-PRP-EU			SF-PRP-VN	SF-PRP-RU			SF-PRP-KR	SF-PRP-CN			SF-PRP-UL			SF-PRP-MX						
		2P	4P	6P	2P	4P	6P	4P	2P	4P	6P	4P	2P	4P	6P	2P	4P	6P	2P	4P	6P				
Output [kW]	0.75	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	1.5	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	2.2	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	3.7	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	5.5	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	7.5	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	11	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	15	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	18.5	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	22	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	30	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
	37	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●				
45	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●					
55	●	●	—	●	●	—	●	●	●	—	●	●	●	—	●	●	●	●	●	●	●				

•: Available

For the delivery time, please contact your sales representative.

## Connection Example

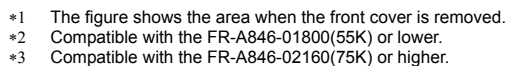



## Standard Specifications

### ● Rating

#### ◆ 400 V class

Model FR-A846-[](-E)		00023	00038	00052	00083	00126	00170	00250	00310	00380	00470	00620	00770	00930	01160	01800	02160	02600	03250	03610	
		0.4K	0.75K	1.5K	2.2K	3.7K	5.5K	7.5K	11K	15K	18.5K	22K	30K	37K	45K	55K	75K	90K	110K	132K	
Applicable motor capacity (kW) *1	LD	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	160	
	ND (initial setting)	0.4	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75	90	110	132	
Output	Rated capacity (kVA) *2	LD	1.6	2.7	3.7	5.8	8.8	12	18	22	27	33	43	53	65	81	110	137	165	198	248
		ND (initial setting)	1.1	1.9	3	4.6	6.9	9.1	13	18	24	29	34	43	54	66	84	110	137	165	198
	Rated current (A)	LD	2.1	3.5	4.8	7.6	11.5	16	23	29	35	43	57	70	85	106	144	180	216	260	325
		ND (initial setting)	1.5	2.5	4	6	9	12	17	23	31	38	44	57	71	86	110	144	180	216	260
	Overload current rating *3	LD	120% 60 s, 150% 3 s (inverse-time characteristics) at surrounding air temperature of 40°C																		
		ND (initial setting)	150% 60 s, 200% 3 s (inverse-time characteristics) at surrounding air temperature of 40°C																		
	Rated voltage *4		Three-phase 380 to 500 V																		
	Regenerative braking	Maximum brake torque *5	10% torque/continuous																		
Power supply	Rated input AC voltage/frequency	Three-phase 380 to 500 V 50 Hz/60 Hz *8																			
	Permissible AC voltage fluctuation	323 to 550 V 50 Hz/60 Hz																			
	Permissible frequency fluctuation	±5%																			
	Rated input current (A) *6	LD	2.1	3.5	4.8	7.6	11.5	16	23	29	35	43	57	70	85	106	144	180	216	260	325
		ND (initial setting)	1.5	2.5	4	6	9	12	17	23	31	38	44	57	71	86	110	144	180	216	260
	Power supply capacity (kVA) *7	LD	1.6	2.7	3.7	5.8	9	12	18	22	27	33	43	53	65	81	110	137	165	198	248
ND (initial setting)		1.1	1.9	3	4.6	6.9	9	13	18	24	29	34	43	54	66	102	110	137	165	198	
Protective structure	IEC 60529	Dust- and water-proof type (IP55) *10																			
	UL50	UL Type12 *9																			
Cooling system		Self cooling + internal fan							Forced-air-cooling + internal fan												
DC reactor		Built-in																			
Approx. mass (kg)		15	15	15	15	16	17	26	26	27	27	59	60	63	64	147	150	153	189	193	

\*1 The applicable motor capacity indicated is the maximum capacity applicable for use of the Mitsubishi Electric 4-pole standard motor.

\*2 The rated output capacity indicated assumes that the output voltage is 440 V.

\*3 The % value of the overload current rating indicated is the ratio of the overload current to the inverter's rated output current. For repeated duty, allow time for the inverter and motor to return to or below the temperatures under 100% load.

\*4 The maximum output voltage does not exceed the power supply voltage. The maximum output voltage can be changed within the setting range. However, the maximum point of the voltage waveform at the inverter output side is the power supply voltage multiplied by about  $\sqrt{2}$ .

\*5 Value for the ND rating.

\*6 The rated input current indicates a value at a rated output voltage. The impedance at the power supply side (including those of the input reactor and cables) affects the rated input current.

\*7 The power supply capacity is the value when at the rated output current. It varies by the impedance at the power supply side (including those of the input reactor and cables).

\*8 For the power voltage exceeding 480 V, set **Pr.977 Input voltage mode selection**.

\*9 UL Type 12 Enclosure-Suitable for Installation in a Compartment Handling Conditioned Air (Plenum)

\*10 For compliance with IP55, remove the protective bushes and install the recommended cable glands.

# Standard Specifications

## Common specifications

Control specifications	Control method		Soft-PWM control, high carrier frequency PWM control (selectable among V/F control, Advanced magnetic flux vector control, Real sensorless vector control), Optimum excitation control, vector control*1, and PM sensorless vector control
	Output frequency range		0.2 to 590 Hz (The upper-limit frequency is 400 Hz under Advanced magnetic flux vector control, Real sensorless vector control, vector control*1, and PM sensorless vector control.)
	Frequency setting resolution	Analog input	0.015 Hz/60 Hz (0 to 10 V/12 bits for terminals 2 and 4) 0.03 Hz/60 Hz (0 to 5 V/11 bits or 0 to 20 mA/approx. 11 bits for terminals 2 and 4, 0 to $\pm 10$ V/12 bits for terminal 1) 0.06 Hz/60 Hz (0 to $\pm 5$ V/11 bits for terminal 1)
		Digital input	0.01 Hz
	Frequency accuracy	Analog input	Within $\pm 0.2\%$ of the max. output frequency (25°C $\pm 10^\circ\text{C}$ )
		Digital input	Within 0.01% of the set output frequency
	Voltage/frequency characteristics		Base frequency can be set from 0 to 590 Hz. Constant-torque/variable-torque pattern or adjustable 5 points V/F can be selected.
	Starting torque		LD rating: 150% 0.3 Hz, ND rating: 200%*6 0.3 Hz (Real sensorless vector control, vector control*1)
	Torque boost		Manual torque boost
	Acceleration/deceleration time setting		0 to 3600 s (acceleration and deceleration can be set individually), linear or S-pattern acceleration/deceleration mode, backlash countermeasures acceleration/deceleration can be selected.
	DC injection brake (induction motor)		Operation frequency (0 to 120 Hz), operation time (0 to 10 s), operation voltage (0 to 30%) variable
Operation specifications	Stall prevention operation level		Activation range of stall prevention operation (LD rating: 0 to 150%, ND rating: 0 to 220%). Whether to use the stall prevention or not can be selected (V/F control, Advanced magnetic flux vector control)
	Torque limit level		Torque limit value can be set (0 to 400% variable). (Real sensorless vector control, vector control*1, PM sensorless vector control)
	Frequency setting signal	Analog input	Terminals 2 and 4: 0 to 10 V, 0 to 5 V, 4 to 20 mA (0 to 20 mA) are available. Terminal 1: -10 to +10 V, -5 to +5 V are available.
		Digital input	Input using the setting dial of the operation panel or parameter unit Four-digit BCD or 16-bit binary (when used with option FR-A8AX)
	Start signal		Forward and reverse rotation or start signal automatic self-holding input (3-wire input) can be selected.
	Input signals (twelve terminals)		Low-speed operation command, Middle-speed operation command, High-speed operation command, Second function selection, Terminal 4 input selection, Jog operation selection, Selection of automatic restart after instantaneous power failure, flying start, Output stop, Start self-holding selection, Forward rotation command, Reverse rotation command, Inverter reset The signal to be input can be changed using <b>Pr.178 to Pr.189 (Input terminal function selection)</b> .
	Pulse train input		100 kpps
	Operational functions		Maximum and minimum frequency settings, multi-speed operation, acceleration/deceleration pattern, thermal protection, DC injection brake, starting frequency, JOG operation, output stop (MRS), stall prevention, regeneration avoidance, increased magnetic excitation deceleration, DC feeding, frequency jump, rotation display, automatic restart after instantaneous power failure, electronic bypass sequence, remote setting, automatic acceleration/deceleration, retry function, carrier frequency selection, fast-response current limit, forward/reverse rotation prevention, operation mode selection, slip compensation, droop control, load torque high-speed frequency control, speed smoothing control, traverse, auto tuning, applied motor selection, gain tuning, RS-485 communication, Ethernet communication*2, PID control, PID pre-charge function, easy dancer control, cooling fan operation selection, stop selection (deceleration stop/coasting), power-failure deceleration stop function, stop-on-contact control, PLC function, life diagnosis, maintenance timer, current average monitor, multiple rating, orientation control*1, speed control, torque control, position control, pre-excitation, torque limit, test run, 24 V power supply input for control circuit, safety stop function, anti-sway control
	Output signal Open collector output (five terminals) Relay output (two terminals)		Inverter running, Up to frequency, Instantaneous power failure/undervoltage, Overload warning, Output frequency detection, Fault The signal to be output can be changed using <b>Pr.190 to Pr.196 (Output terminal function selection)</b> . Fault codes of the inverter can be output (4 bits) from the open collector.
	Pulse train output		50 kpps
Indication	For meter	Pulse train output (FM type)	Max. 2.4 kHz: one terminal (output frequency) The monitored item can be changed using <b>Pr.54 FM/CA terminal function selection</b> .
		Current output (CA type)	Max. 20 mADC: one terminal (output frequency) The monitored item can be changed using <b>Pr.54 FM/CA terminal function selection</b> .
		Voltage output	Max. 10 VDC: one terminal (output frequency) The monitored item can be changed using <b>Pr.158 AM terminal function selection</b> .
	Operation panel	Operating status	Output frequency, Output current, Output voltage, Frequency setting value The monitored item can be changed using <b>Pr.52 Operation panel main monitor selection</b> .
		Fault record	Fault record is displayed when a fault occurs. Past 8 fault records (output voltage/current/frequency/cumulative energization time immediately before the fault occurs) are stored.

	<b>Protective/warning function</b>	<b>Protective function</b>	Overcurrent trip during acceleration, Overcurrent trip during constant speed, Overcurrent trip during deceleration or stop, Regenerative overvoltage trip during acceleration, Regenerative overvoltage trip during constant speed, Regenerative overvoltage trip during deceleration or stop, Inverter overload trip, Motor overload trip, Heatsink overheat, Instantaneous power failure, Undervoltage, Input phase loss*5, Stall prevention stop, Loss of synchronism detection*5, Brake transistor alarm detection, Output side earth (ground) fault overcurrent, Output short circuit, Output phase loss, External thermal relay operation*5, PTC thermistor operation*5, Option fault, Communication option fault, Parameter storage device fault, PU disconnection, Retry count excess*5, CPU fault, Operation panel power supply short circuit, 24 VDC power fault, Abnormal output current detection*5, Inrush current limit circuit fault, Communication fault, Analog input fault, USB communication fault, Safety circuit fault, Overspeed occurrence*5, Speed deviation excess detection*1*5, Signal loss detection*1*5, Excessive position fault*1*5, Brake sequence fault*5, Encoder phase fault*1*5, 4 mA input fault*5, Pre-charge fault*5, PID signal fault*5, Opposite rotation deceleration fault*5, Internal circuit fault, User definition error by the PLC function, Abnormal internal temperature, Magnetic pole position unknown*1
		<b>Warning function</b>	Fan alarm, Stall prevention (overcurrent), Stall prevention (overvoltage), Electronic thermal relay function pre-alarm, PU stop, Speed limit indication*5, Safety stop, Maintenance signal output*5, USB host error, Home position return setting error*5, Home position return uncompleted*5, Home position return parameter setting error*5, Operation panel lock*5, Password locked*5, Parameter write error, Copy operation error, 24 V external power supply operation, Internal-circulation fan alarm, Continuous operation during communication fault, Ethernet communication fault*2
<b>Environment</b>	<b>Ambient temperature</b>	-10°C to +40°C (non-freezing)	
	<b>Surrounding air humidity</b>	95% RH or less (non-condensing),	
	<b>Storage temperature*3</b>	-20°C to +65°C	
	<b>Atmosphere</b>	Indoors (without corrosive gas, flammable gas, oil mist, dust and dirt, etc.)	
	<b>Altitude/vibration</b>	Maximum 1000 m*4, 5.9 m/s <sup>2</sup> *7 or less at 10 to 55 Hz (directions of X, Y, Z axes)	

\*1 Available when a vector control compatible option is mounted.

\*2 Available for the FR-A806-E only.

\*3 Temperature applicable for a short time, e.g. in transit.

\*4 For the installation at an altitude above 1,000 m up to 2,500 m, derate the rated current 3% per 500 m.

\*5 This protective function is not available in the initial status.



\*6 In the initial setting for the the FR-A846-00170(5.5K) or higher, it is limited to 150% by the torque limit level.

\*7 2.9 m/s<sup>2</sup> or less for the FR-A846-01800(55K) or higher.

Outline Dimension Drawings



FR-A846-00023(0.4K) to 00170(5.5K)

FR-A846-00250(7.5K) to 00470(18.5K)

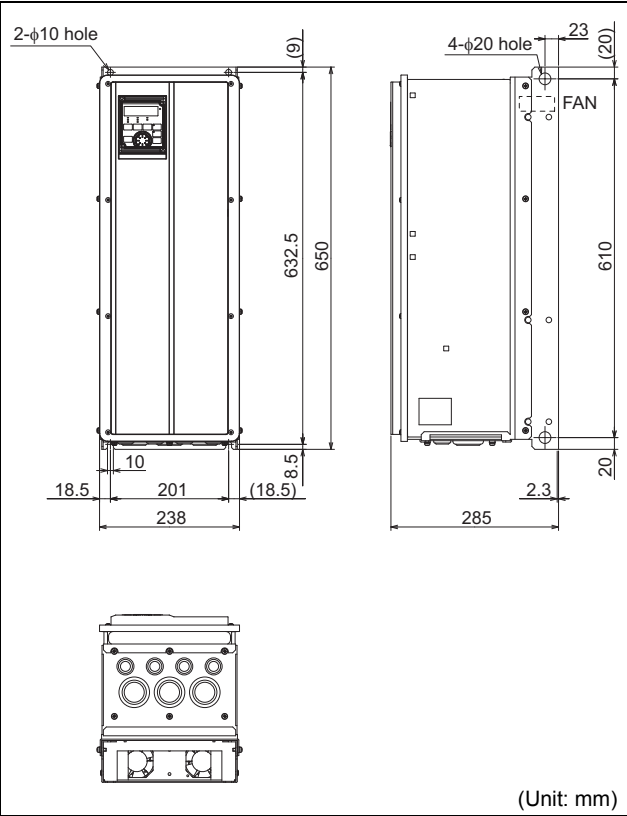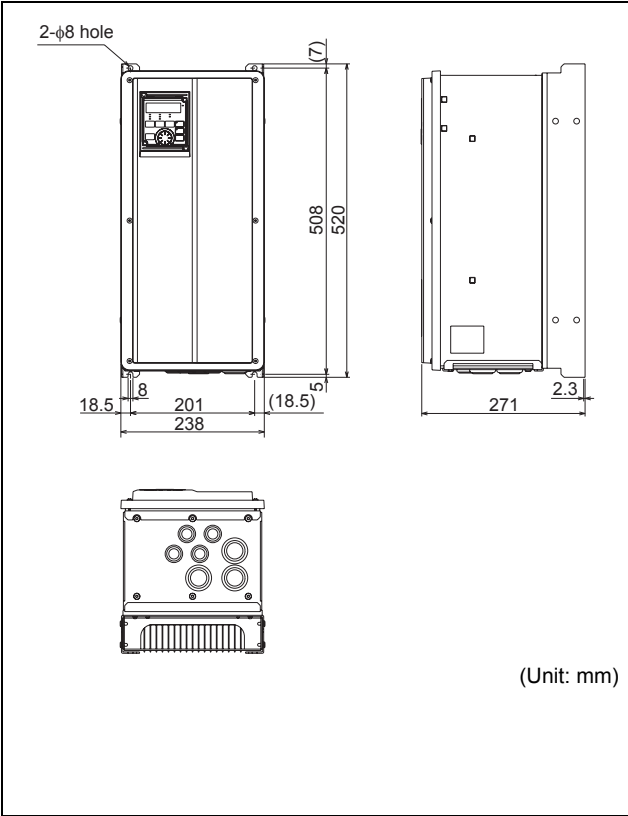


FR-A846-00620(22K) to 01160(45K)

FR-A846-01800(55K) to 03610(132K)

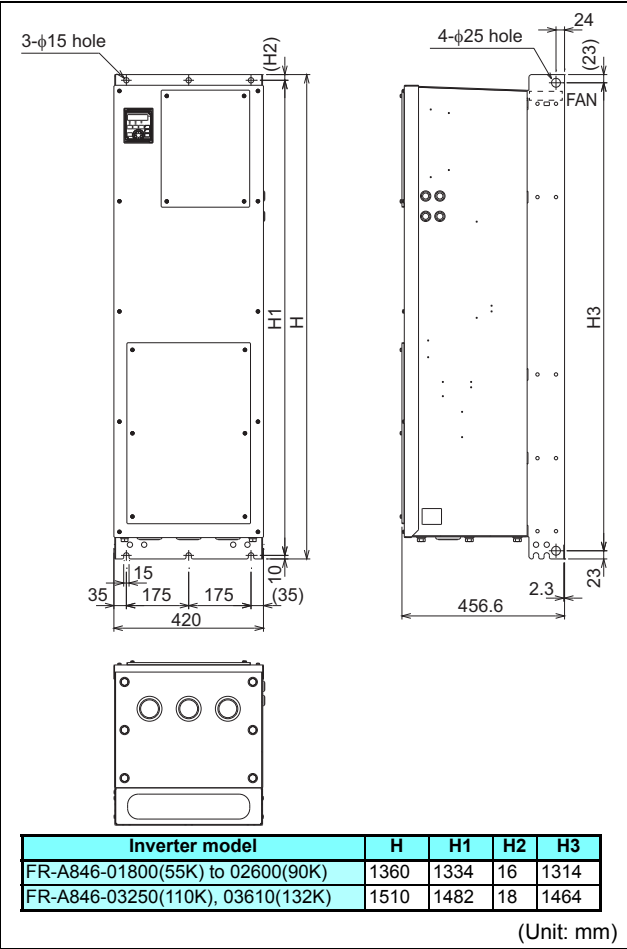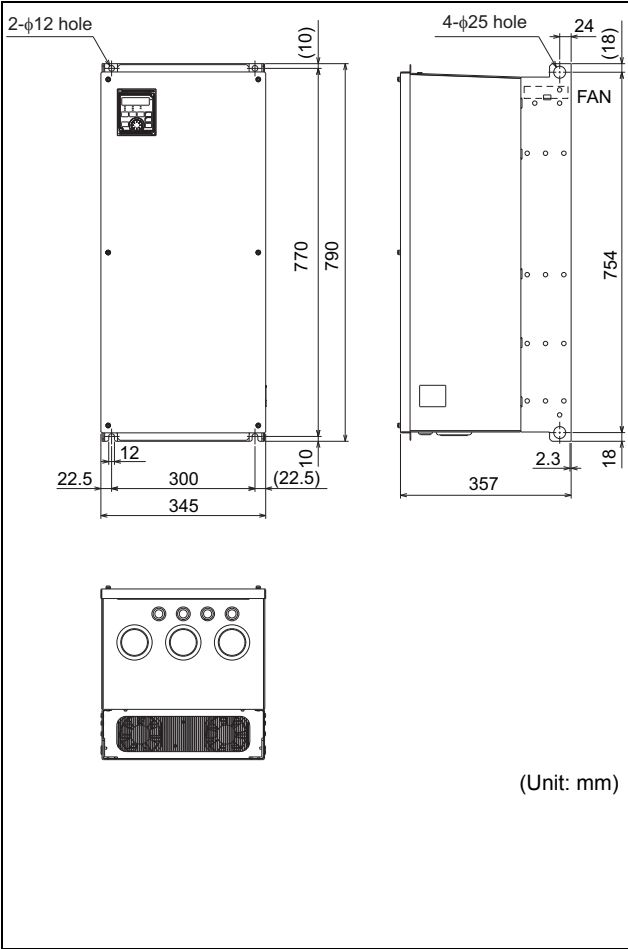

# Terminal Connection Diagrams

## ● FM type

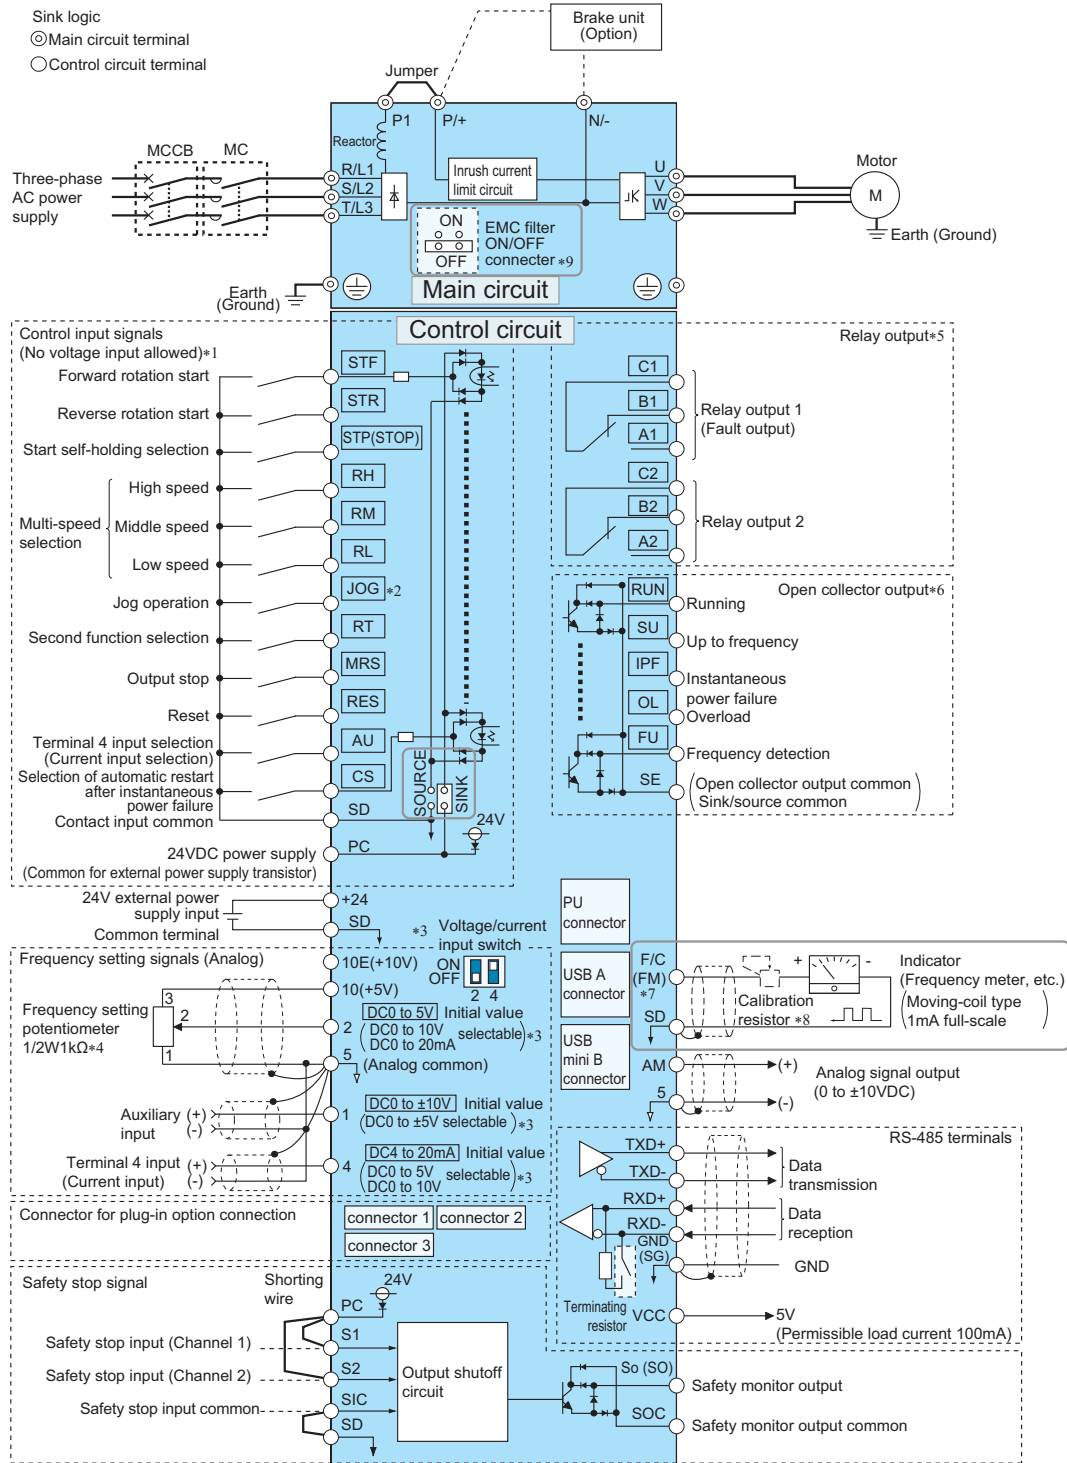


- \*1 The function of these terminals can be changed with the input terminal assignment (Pr.178 to Pr.189).
- \*2 Terminal JOG is also used as a pulse train input terminal. Use Pr.291 to choose JOG or pulse.
- \*3 Terminal input specifications can be changed by analog input specification switchover (Pr.73, Pr.267). To input a voltage, set the voltage/current input switch OFF. To input a current, set the voltage/current input switch ON. Terminals 10 and 2 are also used as a PTC input terminal. (Pr.561)
- \*4 It is recommended to use 2 W 1 kΩ when the frequency setting signal is changed frequently.
- \*5 The function of these terminals can be changed with the output terminal assignment (Pr.195, Pr.196).
- \*6 The function of these terminals can be changed with the output terminal assignment (Pr.190 to Pr.194).
- \*7 The terminal FM can be used to output pulse trains as open collector output by setting Pr.291.
- \*8 Not required when calibrating the scale with the operation panel.
- \*9 Do not change the initially set ON (enabled) position of the EMC filter ON/OFF connector in the case of the inverter with a built-in C2 filter. The Class C2 compatibility condition is not satisfied with the EMC filter OFF. The FR-A846-00250(7.5K)-C2/L2 to FR-A846-00470(18.5K)-C2/L2 are not provided with the EMC filter ON/OFF connector. The EMC filter is always ON.



# Terminal Connection Diagrams


## CA type

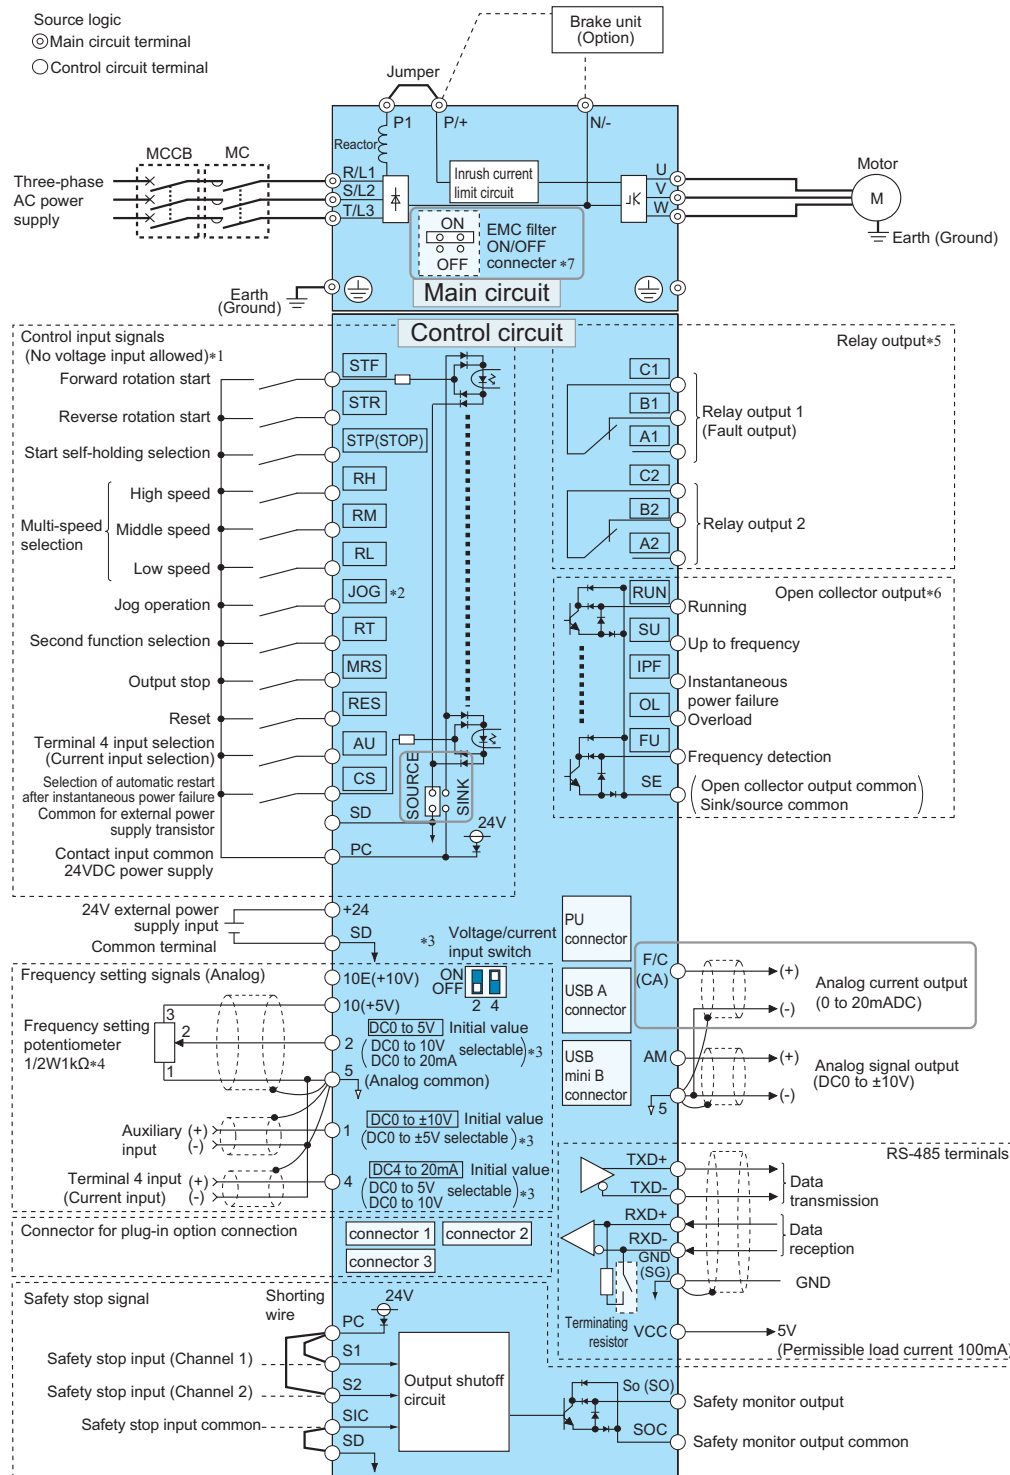

- \*1 The function of these terminals can be changed with the input terminal assignment (Pr.178 to Pr.189).
- \*2 Terminal JOG is also used as a pulse train input terminal. Use Pr.291 to choose JOG or pulse.
- \*3 Terminal input specifications can be changed by analog input specification switchover (Pr.73, Pr.267). To input a voltage, set the voltage/current input switch OFF. To input a current, set the voltage/current input switch ON. Terminals 10 and 2 are also used as a PTC input terminal. (Pr.561)
- \*4 It is recommended to use 2 W 1 kΩ when the frequency setting signal is changed frequently.
- \*5 The function of these terminals can be changed with the output terminal assignment (Pr.195, Pr.196).
- \*6 The function of these terminals can be changed with the output terminal assignment (Pr.190 to Pr.194).
- \*7 Do not change the initially set ON (enabled) position of the EMC filter ON/OFF connector in the case of the inverter with a built-in C2 filter. The Class C2 compatibility condition is not satisfied with the EMC filter OFF. The FR-A846-00250(7.5K)-C2/L2 to FR-A846-00470(18.5K)-C2/L2 are not provided with the EMC filter ON/OFF connector. The EMC filter is always ON.

## FR-A806-E


### FM type

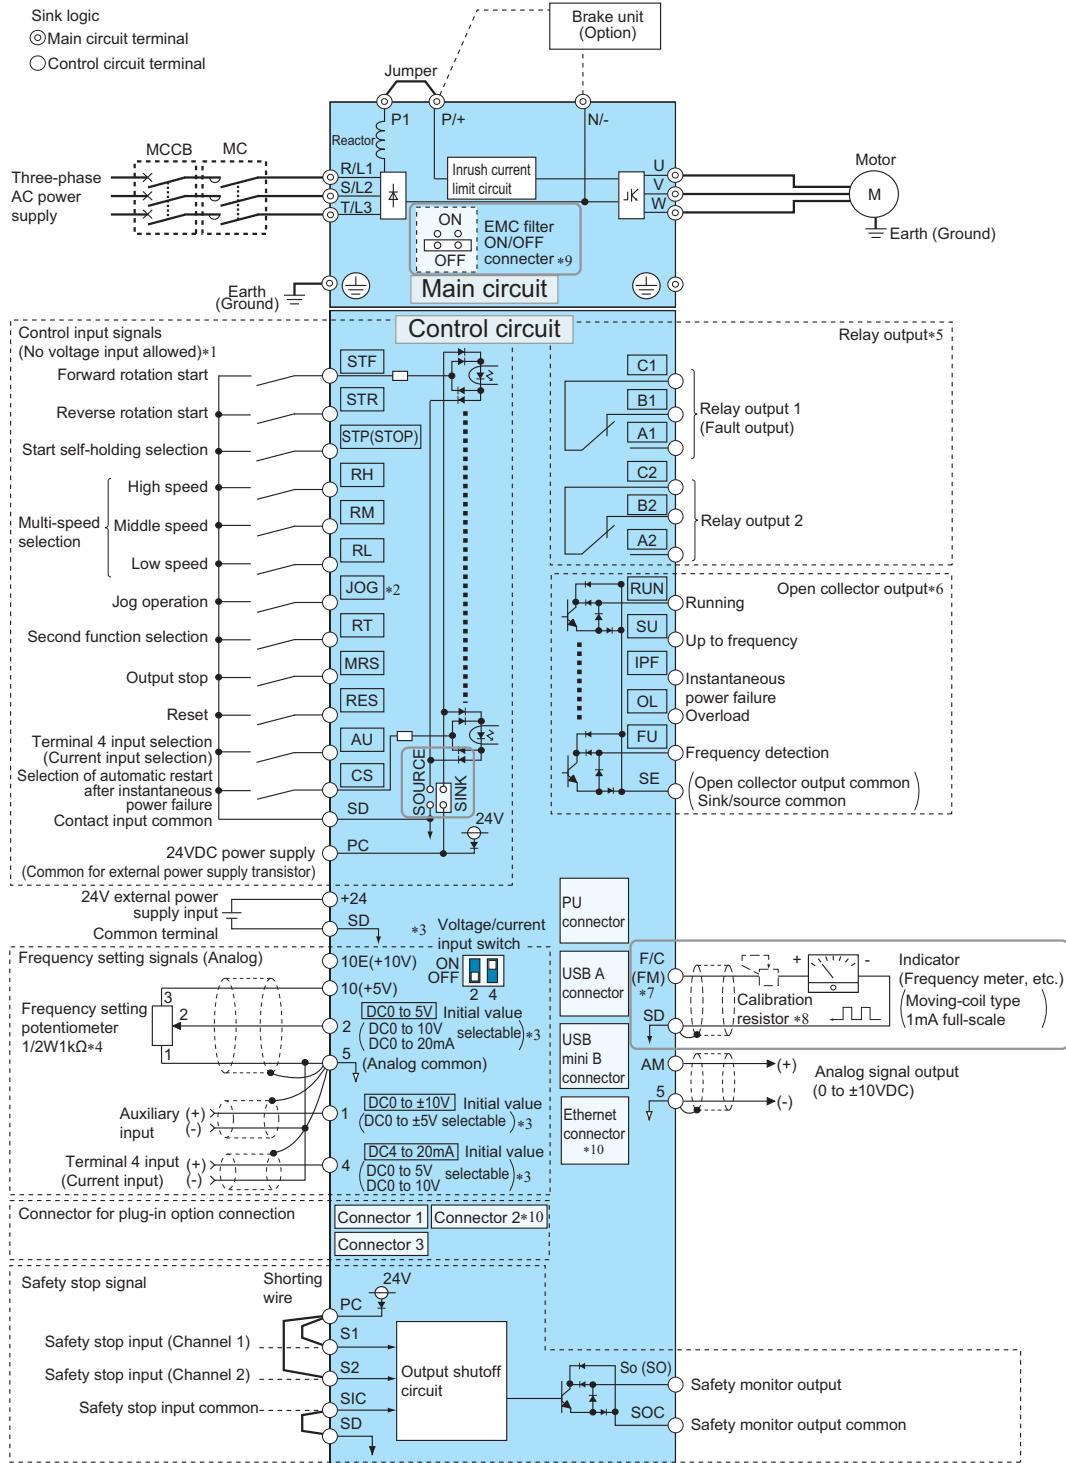

- \*1 The function of these terminals can be changed with the input terminal assignment (Pr.178 to Pr.189).
- \*2 Terminal JOG is also used as a pulse train input terminal. Use Pr.291 to choose JOG or pulse.
- \*3 Terminal input specifications can be changed by analog input specification switchover (Pr.73, Pr.267). To input a voltage, set the voltage/current input switch OFF. To input a current, set the voltage/current input switch ON. Terminals 10 and 2 are also used as a PTC input terminal. (Pr.561)
- \*4 It is recommended to use 2 W 1 kΩ when the frequency setting signal is changed frequently.
- \*5 The function of these terminals can be changed with the output terminal assignment (Pr.195, Pr.196).
- \*6 The function of these terminals can be changed with the output terminal assignment (Pr.190 to Pr.194).
- \*7 Terminal FM can be used to output pulse trains as open collector output by setting Pr.291.
- \*8 Not required when calibrating the scale with the operation panel.
- \*9 Do not change the initially set ON (enabled) position of the EMC filter ON/OFF connector in the case of the inverter with a built-in C2 filter. The Class C2 compatibility condition is not satisfied with the EMC filter OFF. The FR-A846-00250(7.5K)-C2/L2 to FR-A846-00470(18.5K)-C2/L2 are not provided with the EMC filter ON/OFF connector. The EMC filter is always ON.
- \*10 The option connector 2 cannot be used because the Ethernet board is installed in the initial status. The Ethernet board must be removed to install a plug-in option to the option connector 2. (However, Ethernet communication is disabled in that case.)

# Terminal Connection Diagrams


## ◆ CA type

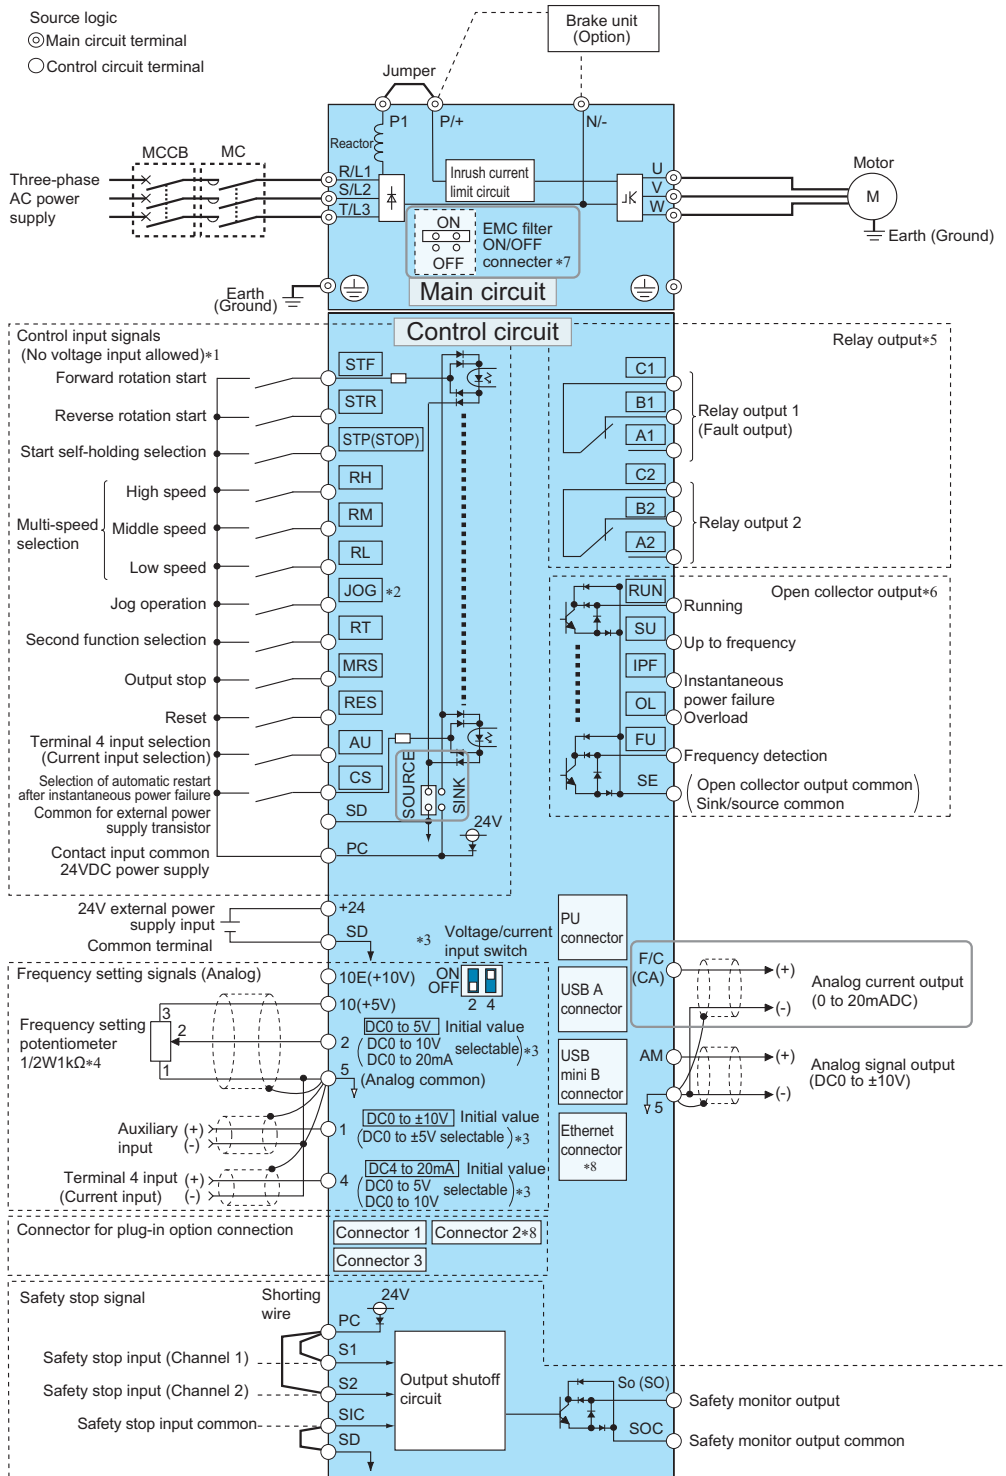

- \*1 The function of these terminals can be changed with the input terminal assignment (Pr.178 to Pr.189).
- \*2 Terminal JOG is also used as a pulse train input terminal. Use Pr.291 to choose JOG or pulse.
- \*3 Terminal input specifications can be changed by analog input specification switchover (Pr.73, Pr.267). To input a voltage, set the voltage/current input switch OFF. To input a current, set the voltage/current input switch ON. Terminals 10 and 2 are also used as a PTC input terminal. (Pr.561)
- \*4 It is recommended to use 2 W 1 kΩ when the frequency setting signal is changed frequently.
- \*5 The function of these terminals can be changed with the output terminal assignment (Pr.195, Pr.196).
- \*6 The function of these terminals can be changed with the output terminal assignment (Pr.190 to Pr.194).
- \*7 Do not change the initially set ON (enabled) position of the EMC filter ON/OFF connector in the case of the inverter with a built-in C2 filter. The Class C2 compatibility condition is not satisfied with the EMC filter OFF. The FR-A846-00250(7.5K)-C2/L2 to FR-A846-00470(18.5K)-C2/L2 are not provided with the EMC filter ON/OFF connector. The EMC filter is always ON.
- \*8 The option connector 2 cannot be used because the Ethernet board is installed in the initial status. The Ethernet board must be removed to install a plug-in option to the option connector 2. (However, Ethernet communication is disabled in that case.)

## Terminal Specification Explanation

Input signal function of the terminals in   can be selected by setting **Pr.178 to Pr.196 (I/O terminal function selection)**.  
Terminal names and terminal functions are those of the factory set.

Type	Terminal Symbol	Terminal Name	Description			
Main circuit	R/L1, S/L2, T/L3	AC power input	Connect these terminals to the commercial power supply. Do not connect anything to these terminals when using the high power factor converter (FR-HC2) or the power regeneration common converter (FR-CV).			
	U, V, W	Inverter output	Connect these terminals to a three-phase squirrel cage motor or a PM motor.			
	P/+, N/-	Brake unit connection	Connect the brake unit (FR-BU2, FR-BU, BU), power regeneration common converter (FR-CV), power regeneration converter (MT-RC), high power factor converter (FR-HC2), or DC power supply (under DC feeding mode).			
	P/+, P1	—	Do not remove the jumper across terminals P/+ and P1 except for connecting the power regeneration common converter (FR-CV) or the high power factor converter (FR-HC2).			
		Earth (Ground)	For earthing (grounding) the inverter chassis. This must be earthed (grounded).			
Control circuit/input signal	Contact input	STF	Forward rotation start	Turn ON the STF signal to start forward rotation and turn it OFF to stop.	When the STF and STR signals are turned ON simultaneously, the stop command is given.	
		STR	Reverse rotation start	Turn ON the STR signal to start reverse rotation and turn it OFF to stop.		
		STP (STOP)	Start self-holding selection	Turn ON the STP (STOP) signal to self-hold the start signal.		
		RH, RM, RL	Multi-speed selection	Multi-speed can be selected according to the combination of RH, RM and RL signals.		
		JOG	Jog mode selection	Turn ON the JOG signal to enable JOG operation (initial setting) and turn ON the start signal (STF or STR) to start JOG operation.		
			Pulse train input	Terminal JOG is also used as a pulse train input terminal. To use as a pulse train input terminal, change the <b>Pr.291</b> setting. (maximum input pulse: 100 k pulses/s)		
		RT	Second function selection	Turn ON the RT signal to enable the second function. When the second function such as "second torque boost" and "second V/F (base frequency)" is set, turning ON the RT signal enables the selected function.		
		MRS	Output stop	Turn ON the MRS signal (20 ms or more) to stop the inverter output. Use this signal to shut off the inverter output when stopping the motor with an electromagnetic brake.		
		RES	Reset	Use this signal to reset a fault output provided when a protective function is activated. Turn ON the RES signal for 0.1 s or longer, then turn it OFF. In the initial setting, reset is set always-enabled. By setting <b>Pr.75</b> , reset can be set enabled only at fault occurrence. The inverter recovers about 1 s after the reset is released.		
		AU	Terminal 4 input selection	The terminal 4 function is available only when the AU signal is turned ON. Turning the AU signal ON makes terminal 2 invalid.		
		CS	Selection of automatic restart after instantaneous power failure	When the CS signal is left ON, the inverter restarts automatically at power restoration. Note that restart setting is necessary for this operation. In the initial setting, a restart is disabled.		
		SD	Contact input common (sink)*1	Common terminal for the contact input terminal (sink logic), terminal FM.		
	External transistor common (source)*2		Connect this terminal to the power supply common terminal of a transistor output (open collector output) device, such as a programmable controller, in the source logic to avoid malfunction by undesirable current.			
	24 VDC power supply common		Common terminal for the 24 VDC power supply (terminal PC, terminal +24) Isolated from terminals 5 and SE.			
	PC		External transistor common (sink)*1	Connect this terminal to the power supply common terminal of a transistor output (open collector output) device, such as a programmable controller, in the sink logic to avoid malfunction by undesirable currents.		
			Contact input common (source)*2	Common terminal for contact input terminal (source logic).		
			24 VDC power supply	Can be used as a 24 VDC 0.1 A power supply.		
	Frequency setting	10E	Frequency setting power supply	When connecting the frequency setting potentiometer at an initial status, connect it to the terminal 10.	10 VDC Permissible load current 10 mA	
		10		Change the input specifications of the terminal 2 using <b>Pr.73</b> when connecting it to the terminal 10E.	5 VDC Permissible load current 10 mA	
		2	Frequency setting (voltage)	Inputting 0 to 5 VDC (or 0 to 10 V, 0 to 20 mA) provides the maximum output frequency at 5 V (10 V, 20 mA) and makes input and output proportional. Use <b>Pr.73</b> to switch among input 0 to 5 VDC (initial setting), 0 to 10 VDC, and 0 to 20 mA. Set the voltage/current input switch in the ON position to select current input (0 to 20 mA).	When voltage is input: Input resistance 10 kΩ ±1 kΩ Maximum permissible voltage 20 VDC When current is input: Input resistance 245 Ω ±5 Ω Permissible maximum current 30 mA	
		4	Frequency setting (current)	Inputting 4 to 20 mADC (or 0 to 5 V, 0 to 10 V) provides the maximum output frequency at 20 mA and makes input and output proportional. This input signal is valid only when the AU signal is ON (terminal 2 input is invalid). Use <b>Pr.267</b> to switch among input 4 to 20 mA (initial setting), 0 to 5 VDC, and 0 to 10 VDC. Set the voltage/current input switch in the OFF position to select voltage input (0 to 5 V/0 to 10 V). Use <b>Pr.858</b> to switch terminal functions.		
		1	Frequency setting auxiliary	Inputting 0 to ±5 VDC or 0 to ±10 VDC adds this signal to terminal 2 or 4 frequency setting signal. Use <b>Pr.73</b> to switch between input 0 to ±5 VDC and 0 to ±10 VDC (initial setting). Use <b>Pr.868</b> to switch terminal functions.		Input resistance 10 kΩ ±1 kΩ Permissible maximum voltage ±20 VDC
		5	Frequency setting common	Common terminal for frequency setting signal (terminal 2, 1 or 4) and analog output terminal AM, CA. Do not earth (ground).		

## Terminal Specification Explanation

Type	Terminal Symbol	Terminal Name	Description				
Control circuit/input signal	Thermistor	10 2	PTC thermistor input	For receiving PTC thermistor outputs. When PTC thermistor is valid ( <b>Pr.561</b> ≠ "9999"), the terminal 2 is not available for frequency setting.		Applicable PTC thermistor specification Overheat detection resistance: 0.5 to 30 kΩ (Set by <b>Pr.561</b> )	
	External power supply input	+24	24 V external power supply input	For connecting a 24 V external power supply. If a 24 V external power supply is connected, power is supplied to the control circuit while the main power circuit is OFF.		Input voltage 23 to 25.5 VDC Input current 1.4 A or less	
Control circuit/output signal	Relay	A1, B1, C1	Relay output 1 (alarm output)	1 changeover contact output that indicates that an inverter's protective function has been activated and the outputs are stopped. Fault: discontinuity across B and C (continuity across A and C), Normal: continuity across Band C (discontinuity across A and C)		Contact capacity 230 VAC 0.3 A (power factor = 0.4) 30 VDC 0.3 A	
		A2, B2, C2	Relay output 2	1 changeover contact output			
	Open collector	RUN	Inverter running	Switched to LOW when the inverter output frequency is equal to or higher than the starting frequency (initial value 0.5 Hz). Switched to HIGH during stop or DC injection brake operation.		Permissible load 24 VDC (maximum 27 VDC) 0.1 A (The voltage drop is 2.8 V at maximum while the signal is ON.) LOW is when the open collector output transistor is ON (conducted). HIGH is when the transistor is OFF (not conducted).	
		SU	Up to frequency	Switched to LOW when the output frequency is within the set frequency range ±10% (initial value). Switched to HIGH during acceleration/deceleration and at a stop.			
		OL	Overload warning	Switched to LOW when stall prevention is activated by the stall prevention function. Switched to HIGH when stall prevention is canceled.			
		IPF	Instantaneous power failure	Switched to LOW when an instantaneous power failure occurs or when the undervoltage protection is activated.			
		FU	Frequency detection	Switched to LOW when the inverter output frequency is equal to or higher than the preset detection frequency, and to HIGH when it is less than the preset detection frequency.			
		SE	Open collector output common	Common terminal for terminals RUN, SU, OL, IPF, FU			
	Pulse	FM *3	For meter		Output item: Output frequency (initial setting)	Permissible load current 2 mA For full scale 1440 pulses/s	
			NPN open collector output	Outputs a selected monitored item (such as output frequency) among several monitored items. The signal is not output during an inverter reset. The output signal is proportional to the magnitude of the corresponding monitoring item. Use <b>Pr.55</b> , <b>Pr.56</b> , and <b>Pr.866</b> to set full scales for the monitored output frequency, output current, and torque.	This terminal can be used for open collector outputs by setting <b>Pr.291</b> .	Maximum output pulse 50k pulses/s Permissible load current 80 mA	
	Analog	AM	Analog voltage output		Output item: Output frequency (initial setting)	Output signal 0 to ±10 VDC, Permissible load current 1 mA (load impedance 10 kΩ or more) Resolution 8 bits	
		CA *4	Analog current output			Load impedance 200 Ω to 450 Ω Output signal 0 to 20 mADC	
	Communication	RS-485	—		PU connector	With the PU connector, communication can be made through RS-485. (For connection on a 1:1 basis only) Conforming standard: EIA-485 (RS-485) Transmission format: Multidrop link Communication speed: 4800 to 115200 bps Wiring length: 500 m	
RS-485 terminals			TXD+, TXD-	Inverter transmission terminal	The RS-485 terminals enables the communication by RS-485 (not available for the FR-A806-E). Conforming standard: EIA-485 (RS-485) Transmission format: Multidrop link Communication speed: 300 to 115200 bps Overall length: 500 m		
			RXD+	Inverter reception terminal			
			RXD-, GND (SG)	Earth (Ground)			
Ethernet		—		Ethernet connector	Communication can be made via Ethernet (only available for the FR-A806-E). Category: 100BASE-TX/10BASE-T Data transmission speed: 100 Mbps (100BASE-TX) / 10 Mbps (10BASE-T) Transmission method: Baseband Maximum segment length: 100 m between the hub and the inverter Number of cascade connection stages: Up to 2 (100BASE-TX) / up to 4 (10BASE-T) Interface: RJ-45 Number of interfaces available: 1 IP version: IPv4		
USB		—		USB A connector	A connector (receptacle) A USB memory device enables parameter copies and the trace function.		Interface: Conforms to USB1.1 (USB2.0 full-speed compatible) Transmission speed: 12 Mbps
	—		USB B connector	Mini B connector (receptacle) Connected to a personal computer via USB to enable setting, monitoring, test operations of the inverter by FR Configurator 2.			



## Terminal Specification Explanation

Type	Terminal Symbol	Terminal Name	Description
Safety stop signal	S1	Safety stop input (Channel 1)	<p>The terminals S1 and S2 are used for the safety stop input signal for the safety relay module. The terminals S1 and S2 are used at the same time (dual channel). Inverter output is shutdown by shortening/opening between terminals S1 and SIC, or between S2 and SIC.</p> <p>In the initial status, terminals S1 and S2 are shorted with the terminal PC by shorting wires. The terminal SIC is shorted with the terminal SD. Remove the shorting wires and connect the safety relay module when using the safety stop function.</p> <p>Input resistance 4.7 kΩ Input current 4 to 6 mADC (with 24 VDC input)</p>
	S2	Safety stop input (Channel 2)	
	SIC	Safety stop input terminal common	Common terminal for terminals S1 and S2.
	So (SO)	Safety monitor output (open collector output)	<p>Indicates the safety stop input signal status. Switched to LOW when the status is other than the internal safety circuit failure. Switched to HIGH during the internal safety circuit failure status. (LOW is when the open collector output transistor is ON (conducted). HIGH is when the transistor is OFF (not conducted).)</p> <p>Refer to the Safety stop function instruction manual (BCNA23228-001) when the signal is switched to HIGH while both terminals S1 and S2 are open. (Please contact your sales representative for the manual.)</p> <p>Permissible load 24 VDC (27 VDC at maximum) 0.1 A (The voltage drop is 3.4 V at maximum while the signal is ON.)</p>
	SOC	Safety stop input terminal common	Common terminal for terminal SO.

- \*1 Sink logic is initially set for the FM-type inverter.
- \*2 Source logic is initially set for the CA-type inverter.
- \*3 Terminal FM is provided in the FM-type inverter.
- \*4 Terminal CA is provided in the CA-type inverter.

## Peripheral Devices

### ● Molded case circuit breaker, magnetic contactor, cable gauge

Voltage	Motor output (kW) <sup>*1</sup>	Applicable inverter model	Molded case circuit breaker (MCCB) <sup>*2</sup> or earth leakage circuit breaker (ELB) (NF, NV type)	Input side magnetic contactor <sup>*3</sup>	Recommended cable gauge (mm <sup>2</sup> ) <sup>*4</sup>	
					R/L1, S/L2, T/L3	U, V, W
400 V class	0.4	FR-A846-00023(0.4K)	5A	S-T10	2	2
	0.75	FR-A846-00038(0.75K)	5A	S-T10	2	2
	1.5	FR-A846-00052(1.5K)	10A	S-T10	2	2
	2.2	FR-A846-00083(2.2K)	10A	S-T10	2	2
	3.7	FR-A846-00126(3.7K)	15A	S-T10	2	2
	5.5	FR-A846-00170(5.5K)	20A	S-T12	2	2
	7.5	FR-A846-00250(7.5K)	30A	S-T21	3.5	3.5
	11	FR-A846-00310(11K)	40A	S-T21	5.5	5.5
	15	FR-A846-00380(15K)	50A	S-T21	5.5	5.5
	18.5	FR-A846-00470(18.5K)	60A	S-T35	8	8
	22	FR-A846-00620(22K)	75A	S-T35	14	14
	30	FR-A846-00770(30K)	100A	S-T50	22	22
	37	FR-A846-00930(37K)	100A	S-T50	22	22
	45	FR-A846-01160(45K)	125A	S-T65	38	38
	55	FR-A846-01800(55K)	150A	S-T100	60	60
	75	FR-A846-02160(75K)	200A	S-T100	60	60
	90	FR-A846-02600(90K)	225A	S-N150	60	60
	110	FR-A846-03250(110K)	225A	S-N180	80	80
	132	FR-A846-03610(132K)	350A	S-N220	100	100


\*1 Assumes the use of a Mitsubishi Electric 4-pole standard motor with the power supply voltage of 400 VAC 50 Hz.

\*2 Select an MCCB according to the power supply capacity.  
Install one MCCB per inverter.

For the use in the United States or Canada, provide the appropriate UL and cUL listed fuse or UL489 molded case circuit breaker (MCCB) that is suitable for branch circuit protection.

\*3 Magnetic contactor is selected based on the AC-1 class. The electrical durability of magnetic contactor is 500,000 times. When the magnetic contactor is used for emergency stops during motor driving, the electrical durability is 25 times. If using an MC for emergency stop during motor driving, select an MC regarding the inverter input side current as JEM1038-AC-3 class rated current. When providing an MC on the inverter output side for switching to commercial power supply during general-purpose motor operation, select an MC regarding the rated motor current as JEM1038-AC-3 class rated current.

\*4 For the FR-A846-01800(55K) or lower, it is the gauge of a cable with the continuous maximum permissible temperature of 75°C (HIV cable (600 V grade heat-resistant PVC insulated wire), etc.). It assumes a surrounding air temperature of 50°C or lower and the wiring distance of 20 m or shorter.  
For the FR-A846-02160(75K) or higher, it is the gauge of the cable with the continuous maximum permissible temperature of 90°C or higher. (LMFC (heat resistant flexible cross-linked polyethylene insulated cable), etc.). It assumes a surrounding air temperature of 50°C or lower.



### NOTE


- When the inverter capacity is larger than the motor capacity, select an MCCB and a magnetic contactor according to the inverter model, and select cables and reactors according to the motor output.
- When the breaker on the inverter's input side trips, check for the wiring fault (short circuit), damage to internal parts of the inverter etc. The cause of the trip must be identified and removed before turning ON the power of the breaker.

## ● Cable glands and nuts


For wiring of the IP55 compatible model, fix the cables using a cable gland and a nut, according to the diameter of the holes of the wiring cover.

For the details such as wiring cover hole diameters and recommended cable glands, refer to the following table.


FR-A846-00023(0.4K) to  
00170(5.5K)

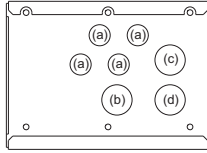


FR-A846-00250(7.5K) to  
00470(18.5K)

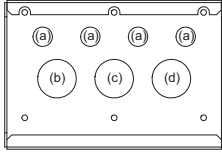

FR-A846-00620(22K) to  
01160(45K)

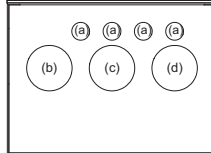

FR-A846-01800(55K) to 03610(132K)

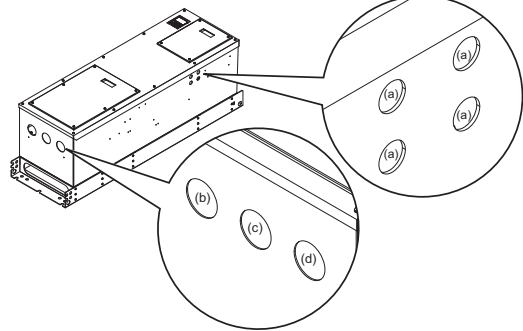

Inverter capacity	Symbol	Recommended layout example	Hole diameter (mm)	Recommended cable gland (Manufactured by LAPP KABEL)	Recommended nut (Manufactured by LAPP KABEL)
<b>FR-A846-00023(0.4K) to 00170(5.5K)</b>	(a)	Control circuit wiring	20.3	SKINTOP MS-SC-M20 53112630 *1 SKINTOP MS-M20 53112020 *2	SKINDICHT SM-M20 52103020
	(b)	AC power input wiring	32.3	SKINTOP MS-SC-M32 53112650 *1	SKINDICHT SM-M32 52103040
	(c)	Brake unit connection wiring		SKINTOP MS-M32 BRUSH 53112677 *1	
	(d)	Inverter output wiring		SKINTOP MS-M32 53112040 *2	
<b>FR-A846-00250(7.5K) to 00470(18.5K)</b>	(a)	Control circuit wiring	20.3	SKINTOP MS-SC-M20 53112630 *1 SKINTOP MS-M20 53112020 *2	SKINDICHT SM-M32 52103020
	(b)	AC power input wiring	40.4	SKINTOP MS-SC-M40 53112660 *1	SKINDICHT SM-M40 52103050
	(c)	Brake unit connection wiring		SKINTOP MS-M40 BRUSH 53112678 *1	
	(d)	Inverter output wiring		SKINTOP MS-M40 53112050 *2	
<b>FR-A846-00620(22K) to 02600(90K)</b>	(a)	Control circuit wiring	20.3	SKINTOP MS-SC-M20 53112630 *1 SKINTOP MS-M20 53112020	SKINDICHT SM-M20 52103020
	(b)	AC power input wiring	63	SKINTOP MS-M63 BRUSH 53112680 *1	SKINDICHT SM-M63 52103070
	(c)	Brake unit connection wiring		SKINTOP MS-M63 53112070 *2	
	(d)	Inverter output wiring			
<b>FR-A846-03250(110K) to 03610(132K)</b>	(a)	Control circuit wiring	20.3	SKINTOP MS-SC-M20 53112630 *1 SKINTOP MS-M20 53112020 *2	SKINDICHT SM-M20 52103020
	(b)	AC power input wiring	63	SKINTOP MS-M63 BRUSH PLUS 53112681 *1	SKINDICHT SM-M63 52103070
	(c)	Brake unit connection wiring		SKINTOP MS-M63 PLUS 53112080 *2	
	(d)	Inverter output wiring			

\*1 EMC-compliant cable gland

\*2 General-purpose cable gland

## Precautions for Use

## Precautions for Use

### Waterproof and dustproof performances

- The inverter is rated with an IPX5\*1 waterproof rating and an IP5X\*2 dustproof rating when the operation panel (FR-DU08-01), the front cover, the wiring cover, and the cable glands are securely fixed with screws.
- The items enclosed with the inverter such as the Instruction Manual or CD are not rated with the IPX5 waterproof or IP5X dustproof ratings.
- Although the inverter is rated with the IPX5 waterproof and IP5X dustproof ratings, it is not intended for use in water. Also, the ratings do not guarantee protection of the inverter from needless submersion in water or being washed under strong running water such as a shower.
- Do not pour or apply the following liquids over the inverter: water containing soap, detergent, or bath additives; sea water; swimming pool water; warm water; boiling water; etc.
- The inverter is intended for indoor\*4 installation and not for outdoor installation. Avoid places where the inverter is subjected to direct sunlight, rain, sleet, snow, or freezing temperatures.
- If the operation panel (FR-DU08-01) is not installed, if the screws of the operation panel are not tightened, or if the operation panel is damaged or deformed, the IPX5 waterproof performance and the IP5X dustproof performance are impaired. If any abnormalities are found on the operation panel, ask for an inspection and repair.
- If the screws of the front cover or the wiring cover are not tightened, if any foreign matter (hair, sand grain, fiber, etc.) is stuck between the inverter and the gasket, if the gasket is damaged, or if the front cover or the wiring cover is damaged or deformed, the IPX5 waterproof performance and the IP5X dustproof performance are impaired. If any abnormalities are found on the front cover, wiring cover, or the gasket of the inverter, ask for an inspection and repair.
- Cable glands are important components to maintain the waterproof and dustproof performances. Be sure to use cable glands of the recommended size and shape or equivalent. The standard protective bushes cannot sufficiently maintain the IPX5 waterproof performance and the IP5X dustproof performance.
- If a cable gland is damaged or deformed, the IPX5 waterproof performance and the IP5X dustproof performance are impaired. If any abnormalities are found on the cable glands, ask the manufacturer of the cable glands for an inspection and repair.
- To maintain the waterproof and dustproof performances of the inverter, daily and periodic inspections are recommended regardless of the presence or absence of abnormalities.

- \*1 IPX5 refers to protection of the inverter functions against water jets from any direction when about 12.5-liter water\*3 is injected from a nozzle with an inside diameter of 6.3 mm from the distance of about 3 m for at least 3 minutes.
- \*2 IP5X refers to protection of the inverter functions and maintenance of safety when the inverter is put into a stirring device containing dust of 75 µm or smaller in diameter, stirred for 8 hours, and then removed from the device.
- \*3 Water here refers to fresh water at room temperature (5 to 35°C).
- \*4 Indoor here refers to the environments that are not affected by climate conditions.

### Major differences between the standard model (FR-A840) and the IP55 compatible model (FR-A846)



Item		FR-A840	FR-A846
Protective structure		Enclose type (IP20): FR-A840-00620(22K) or lower Open type (IP00): FR-A840-00770(30K) or higher	Dust-proof and waterproof type (IP55): All capacities
DC reactor		Optional	Built-in
Internal air circulation fan		Without	With
Protective function		—	Internal fan alarm (FN2), Abnormal internal temperature (E.IAH)
Circuit board coating (conforming to IEC60721-3-3 3C2/3S2)		With / Without (Selectable)	With
Environment	Surrounding air temperature	LD, ND, HD rating: -10°C to +50°C (non-freezing) SLD rating: -10°C to +40°C (non-freezing)	LD, ND rating: -10°C to +40°C (non-freezing)
	Surrounding air humidity	With circuit board coating: 95% RH or less (non-condensing) Without circuit board coating: 90% RH or less (non-condensing)	95% RH or less (non-condensing)
Brake transistor (usable brake resistor)		Built-in for the FR-A820-00046(0.4K) to 01250(22K) Built-in for the FR-A840-00023(0.4K) to 01800(55K)	Without (Brake resistor is not applicable.)
Multiple rating (Pr.570 Multiple rating setting)		SLD, LD, ND (initial setting), HD rating (Setting range: "0 to 3")	LD, ND (initial setting) rating (Setting range: "1 or 2")
Pr.30 Regenerative function selection		Setting range: "0 to 2, 10, 11, 20, 21, 100, 101, 110, 111, 120, or 121"	Setting range: "0, 2, 10, 20, 100, 110, or 120"
Pr.70 Special regenerative brake duty		Available	Not available
Regenerative brake duty (Pr.52, Pr.54, Pr.158, Pr.774 to Pr.776, Pr.992, Pr.1027 to Pr.1034 setting "9")		Available (can be set)	Not available (cannot be set)
Operation panel		FR-DU08: PU/EXT key	FR-DU08-01: HAND/AUTO key
Radio Waves Act (South Korea) (KC mark)		Compliant	Not compliant

For details including the common functions, options, and precautions, refer to the FR-A800 inverter catalog (L(NA)06075ENG).

**MEMO**



# Global network for comprehensive support of

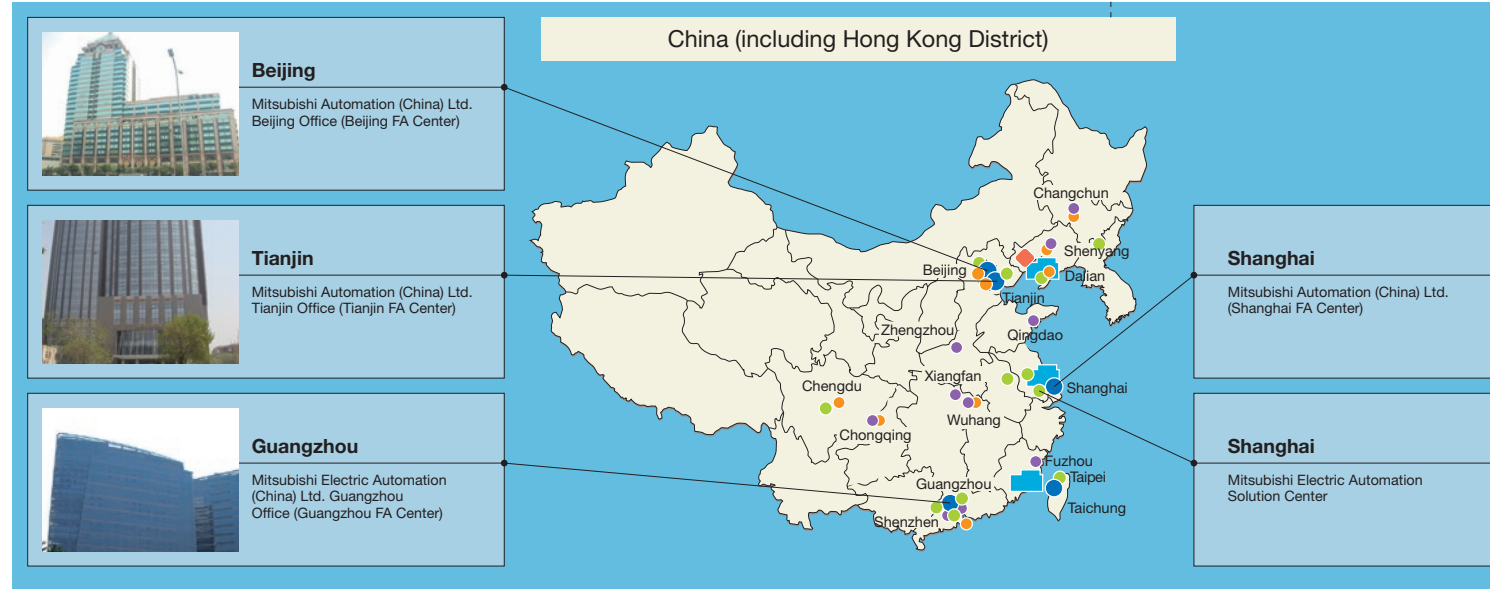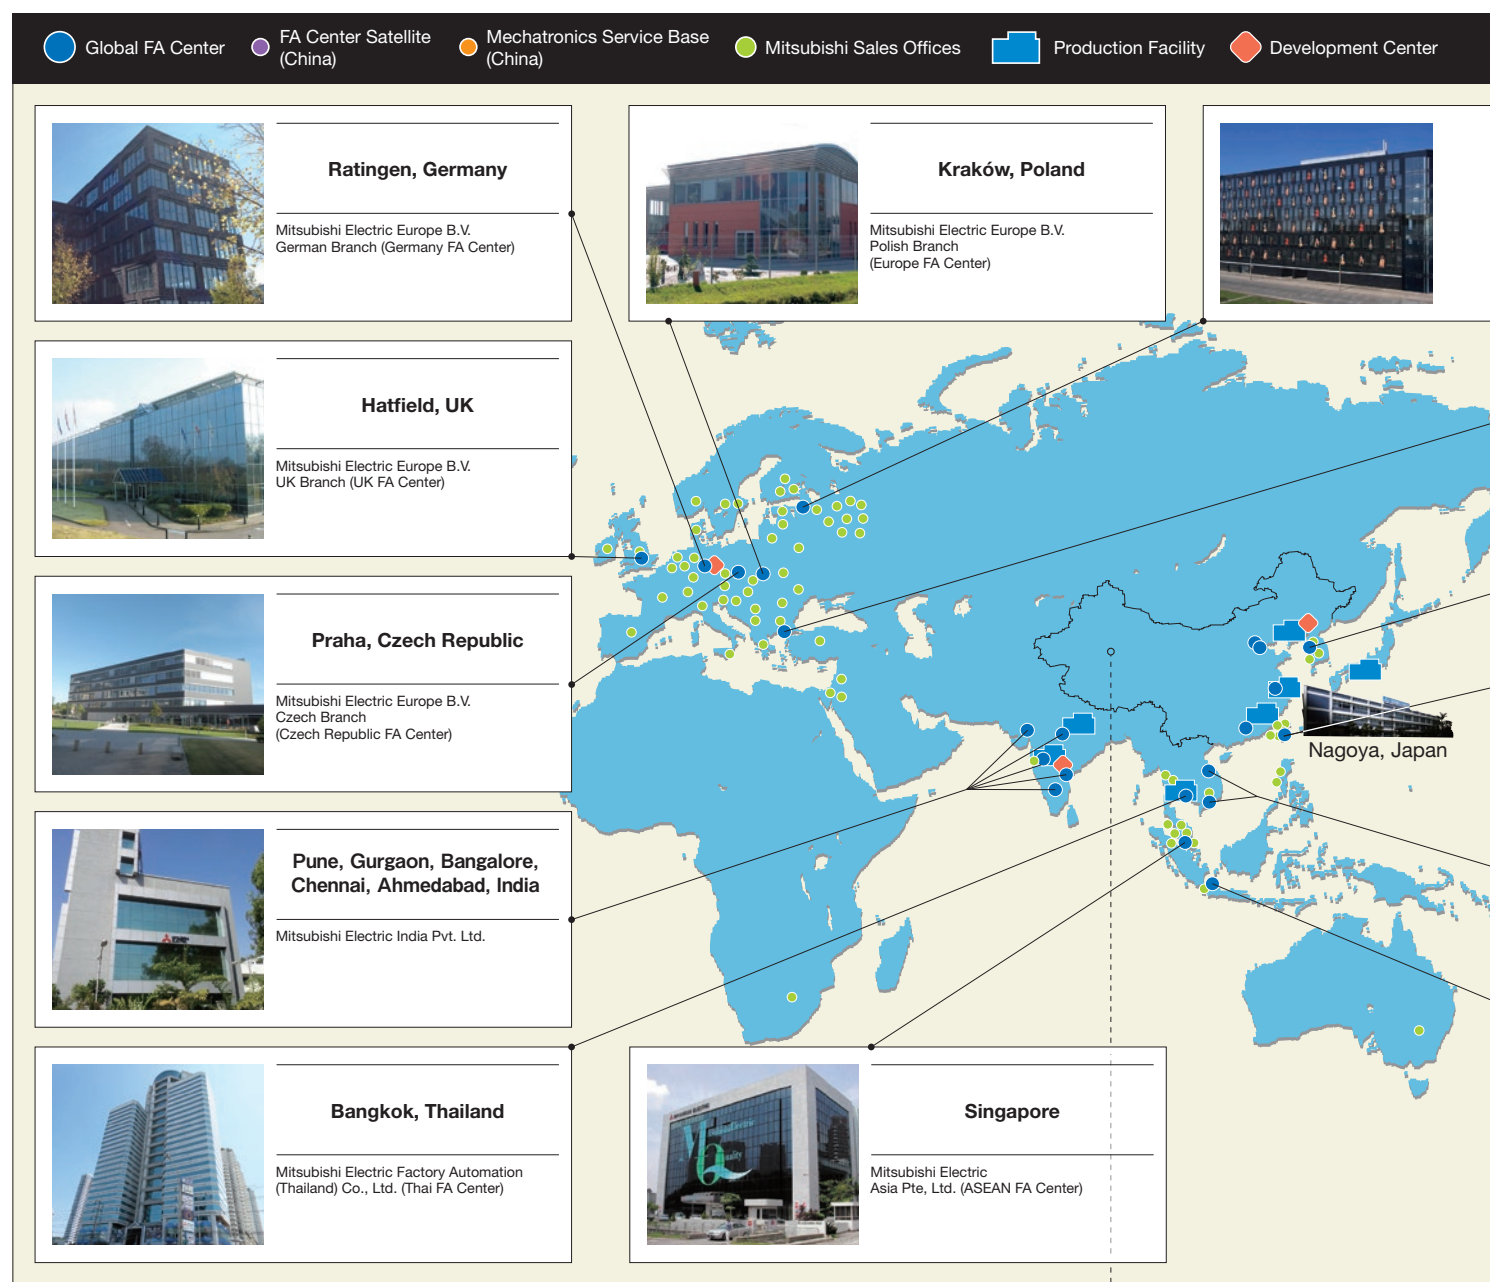

# customers' manufacturing.



Service bases are established around the world to globally provide the same services as in Japan.

**Overseas bases are opened one after another  
to support business expansion of our customers.**



■ Overseas bases   As of July 2014 * Some includes distributors				
Area	Our overseas offices	FA Center (Satellite)	Bases providing our products	Countries (Regions)
EMEA	11	6 (2)	146	54
China	13	4 (10)	171	1
Asia	21	13	79	10
America	14	4 (0)	130	16
Others	1	0	3	2
Total	60	27 (12)	529	83

This solution solves customers' issues and concerns by enabling visualization and analysis that lead to improvements and increase availability at production sites.

Utilizing our FA and IT technologies and collaborating with e-F@ctory Alliance partners, we reduce the total cost across the entire supply chain and engineeringchain, and support the improvement initiatives and one-step-ahead manufacturing of our customers.



FA integrated solutions reduce total cost

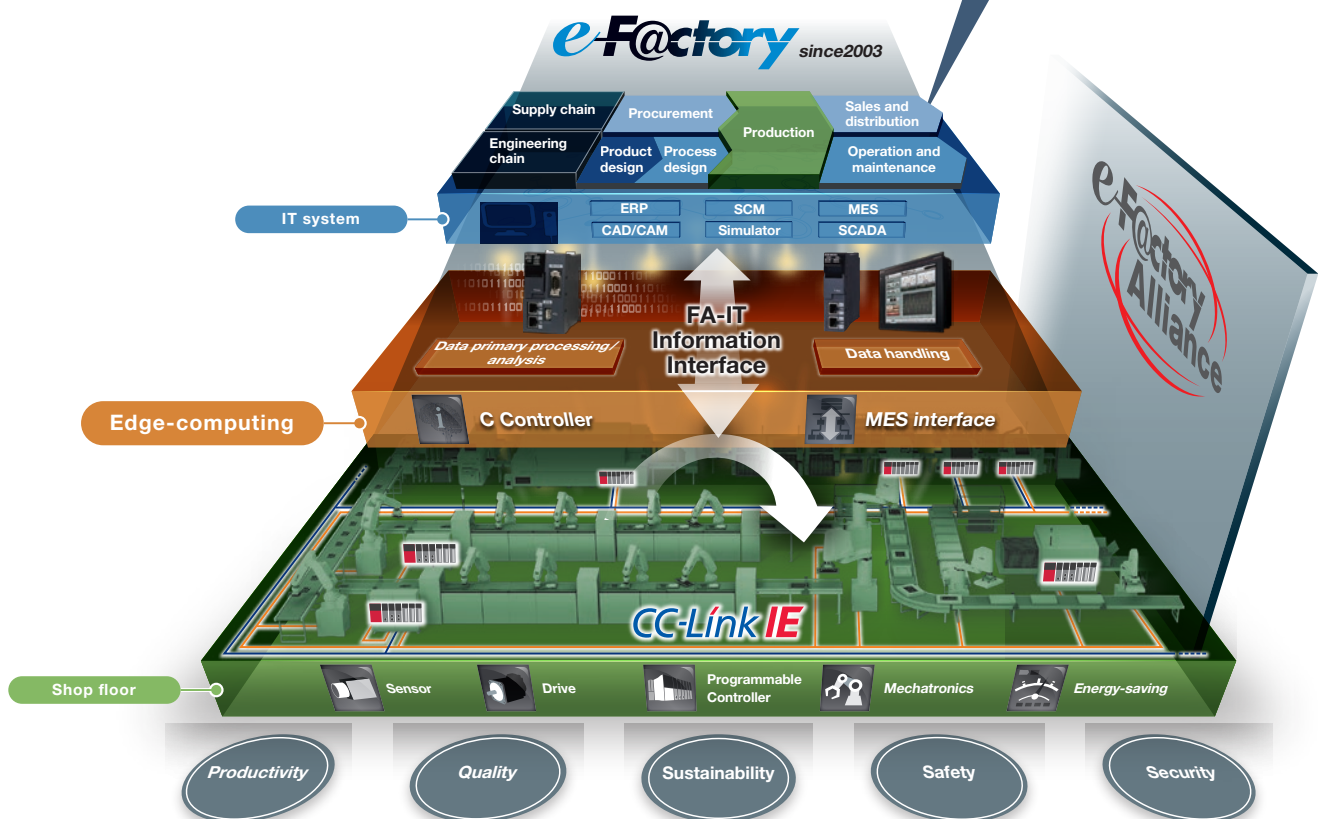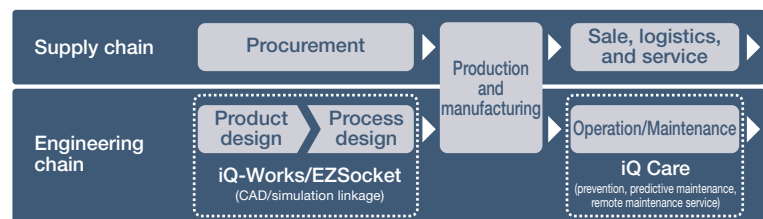

Overall production information is captured in addition to energy information, enabling the realization of efficient production and energy use (energy savings).


#### •Trademarks

MODBUS is a registered trademark of SCHNEIDER ELECTRIC USA, INC.

Ethernet is a registered trademark of Fuji Xerox Corporation in Japan.

Other company and product names herein are the trademarks and registered trademarks of their respective owners.

# YOUR SOLUTION PARTNER

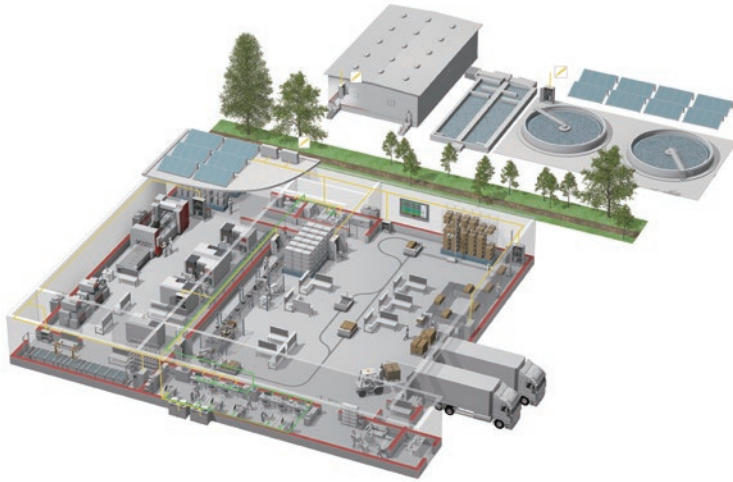

Mitsubishi Electric offers a wide range of automation equipment from PLCs and HMIs to CNC and EDM machines.

## A NAME TO TRUST

Since its beginnings in 1870, some 45 companies use the Mitsubishi name, covering a spectrum of finance, commerce and industry.

The Mitsubishi brand name is recognized around the world as a symbol of premium quality.

Mitsubishi Electric Corporation is active in space development, transportation, semi-conductors, energy systems, communications and information processing, audio visual equipment and home electronics, building and energy management and automation systems, and has 237 factories and laboratories worldwide in over 121 countries.

This is why you can rely on Mitsubishi Electric automation solution - because we know first hand about the need for reliable, efficient, easy-to-use automation and control in our own factories.

As one of the world's leading companies with a global turnover of over 4 trillion Yen (over \$40 billion), employing over 100,000 people, Mitsubishi Electric has the resource and the commitment to deliver the ultimate in service and support as well as the best products.



Low voltage: MCCB, MCB, ACB



Medium voltage: VCB, VCC



Power monitoring, energy management



Compact and Modular Controllers



Inverters, Servos and Motors



Visualisation: HMIs



Numerical Control (NC)



Robots: SCARA, Articulated arm



Processing machines: EDM, Lasers, IDS



Transformers, Air conditioning, Photovoltaic systems

\* Not all products are available in all countries.



Mitsubishi Electric Corporation Nagoya Works  
is a factory certified for ISO 14001  
(standards for environmental management  
systems).



**MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE: TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN